


# HOW TO INSTALL A MIDLAND BT


## UNIT

CHOOSE ONE OF THE TWO PLATES INCLUDED IN THE BOX (ADHESIVE OR SCREW TYPE) AND USE IT TO FIX THE SLIDE-IN MOUNTING KIT ON THE LEFT HAND SIDE. YOUR INTERCOM DEVICE SHOULD BE:

PARALLEL TO THE GROUND (WHEN YOU ARE DRIVING)

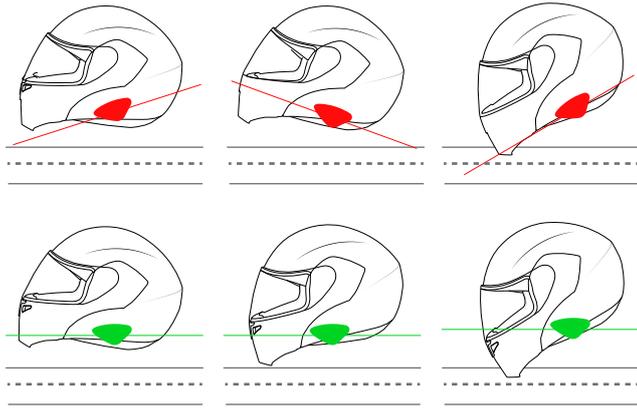

PARALLEL TO THE LONGITUDINAL AXIS OF YOUR MOTORCYCLE.

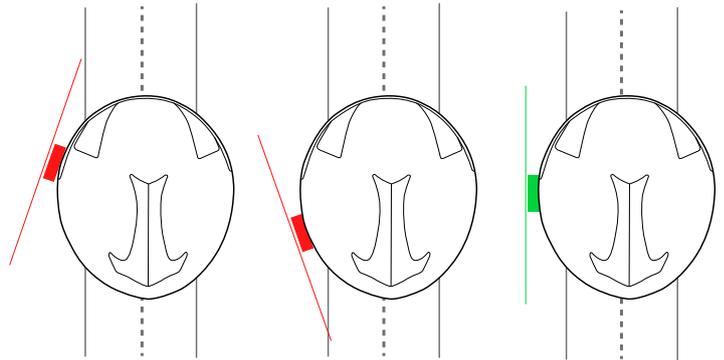

## SPEAKERS

THE SPEAKERS HAVE TO BE FIXED IN A POSITION THAT IS EXACTLY CENTERED TO YOUR EARS, CLOSED ENOUGH BUT WITHOUT HURTING THEM.

IN ORDER TO DO THIS, IT IS NECESSARY TO WEAR THE HELMET AND PUT YOUR FINGER INSIDE THE HELMET TO LOCATE THE EXACT POINT IN FRONT OF YOUR EARS HOLE. ONCE YOU FIND IT, FIX THE VELCRO BAND EXACTLY IN THAT POINT.

FOLLOW THE SAME PROCEDURE FOR BOTH SIDES (LEFT HAND SIDE AND RIGHT HAND SIDE).

SOME HELMETS HAVE THE SPEAKER PREDISPOSITION, BUT IT IS ALWAYS RECOMMENDED TO CHECK IF THEY ARE PLACED IN THE CORRECT POSITION.

WEAR THE HELMET AGAIN AND CHECK THE DISTANCE BETWEEN SPEAKERS AND EARS: IF THE SPEAKERS ARE TOO FAR, THERE WILL BE A LOSS OF SOUND POWER, AS WELL AS OF LOW FREQUENCIES, WHILE LISTENING TO THE MUSIC. IF NECESSARY USE A PAD TO BRING NEAR THE SPEAKERS.

IF THE SPEAKERS ARE BEHIND THE HELMET'S PADDING, IT IS RECOMMENDED TO CHECK THAT THIS PADDING ALLOWS THE SOUND TO PASS THROUGH SINCE PADDINGS ARE USUALLY SOUNDPROOF AND STOP THE SOUNDS; IN THIS CASE, THE SPEAKERS HAVE TO BE POSITIONED OVER IT.

## MICROPHONE

IN CASE OF A FULL FACE HELMET, THE ADHESIVE VELCRO HAS TO BE ATTACHED EXACTLY IN FRONT OF YOUR MOUTH.

IN CASE OF A MODULAR/JET HELMET USED WITH A BOOM MICROPHONE, IT IS RECOMMENDED TO KEEP THE WHITE ARROW SIDE IN FRONT OF YOUR MOUTH. WE SUGGEST TO KEEP IT NO MORE THAN 2 CM FAR FROM YOUR MOUTH.

ONCE YOU HAVE CORRECTLY POSITIONED THE SLIDE-IN MOUNTING KIT, THE TWO SPEAKERS AND THE MICROPHONE, HIDE THE WIRES UNDER THE PADDING.

WHILE DRIVING, REMEMBER TO KEEP THE USB RUBBER COVER PERFECTLY CLOSED.